Ceiling light installation instruction



 




 
- Please read this manual carefully before using the product.
- The manufacturer will not be held responsible for improper usage or modifications of the product.
- Indoor use only.
- Please turn off the power supply before changing the lamp or connection.
- The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
- The luminaire shall not be covered with thermal insulation or similar material under any circumstance.
- 7 Do not touch the lamp source or heating parts when the power is switched on or few minutes after switching off.
- 8 Do not place rapidly flammable material under the luminaire.
- 9 Do not use chemical solvent to clean the luminaire, it may damage the surface.
- 10 Products are advised to use under stabilised voltage power supply only.

 




 








STEP2:fix the bracket in to the ceiling or wall,



STEP3: fix the light to the bracket then turn right to lock it.

Technical parameters:

Item No.:	CLT 522C117	CLT 522C138	CLT 522C200
Power:	10W	15W	30W
Size:	Ф117x115mm	Ф138x115mm	Ф200x140mm
Hole cut:	Surface	Surface	Surface

Ceiling light installation instruction



 




 
- 1 Please read this manual carefully before using the product.
- 2 The manufacturer will not be held responsible for improper usage or modifications of the product.
- Indoor use only.
- Please turn off the power supply before changing the lamp or connection.
- The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
- 6 The luminaire shall not be covered with thermal insulation or similar material under any circumstance.
- 7 Do not touch the lamp source or heating parts when the power is switched on or few minutes after switching off.
- 8 Do not place rapidly flammable material under the luminaire.
- 9 Do not use chemical solvent to clean the luminaire, it may damage the surface.
- 10 Products are advised to use under stabilised voltage power supply only.

 




 








STEP2:fix the bracket in to the ceiling or wall,



STEP3: fix the light to the bracket then turn right to lock it.

Technical parameters:

Item No.:	CLT 522C117	CLT 522C138	CLT 522C200
Power:	10W	15W	30W
Size:	Ф1 17 х115mm	Ф138x115mm	Ф200x140mm
Hole cut:	Surface	Surface	Surface