



5

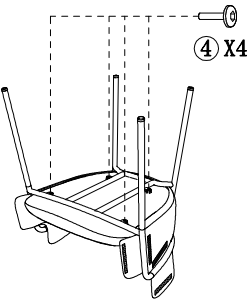

④ X4


6

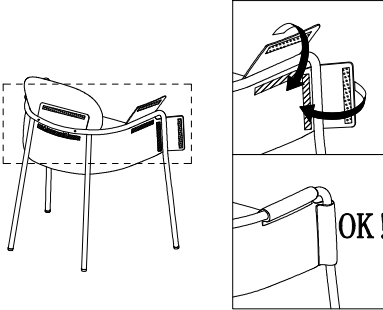


OK!

①		1
②		1
③		1
④	 M6X16	4+1
⑤	 M6X20	2+1
⑥	 M6X35	2+1
		1

CL0-2/CL0-5

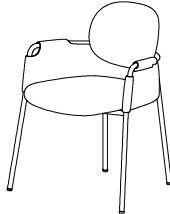



1

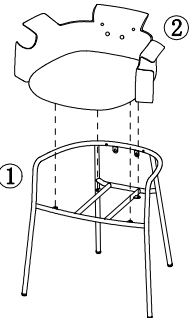

2

Tighten the back cloth before installing the screws

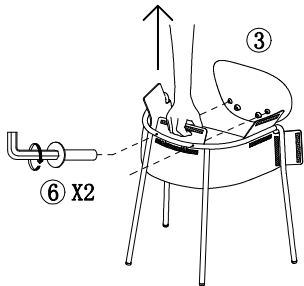


⑥ X2




3

Tighten the back cloth before installing the screws

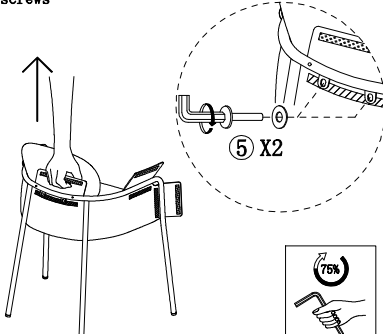

⑤ X2



4

